

# Quick Start Guide LINEARdrive 100/A

(LIN100A1)



# Connecting and configuring LINEARdrive 100/A



A Removing the covers


B Removing the strain reliefs



C Mounting the LINEARdrive

In Europe, use a H03V 0.75mm<sup>2</sup> power cable and apply following strip lengths:

Pay attention when connecting the LED groups: polarity reversal results in no light output and often damages the LEDs

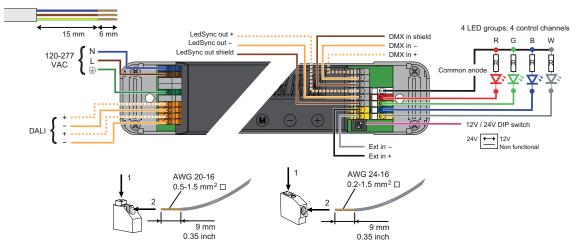

D Making the wire connections and setting the voltage



I DE ABRICO AC

E Fastening the strain reliefs

F Configuring the LINEARdrive



G Replacing the covers




WARNING: Risk of electrical shock. May result in serious injury or death. Disconnect power before servicing or installing.

 $\Lambda$ 


CAUTION: The device may only be connected and installed by a qualified electrician. All applicable regulations, legislation and building codes must be observed. Incorrect installation of the device can cause irreparable damage to the device and the connected LEDs.

### **Manual configuration**

#### 1. Select mode of operation

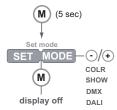

### 2. Set LED groups

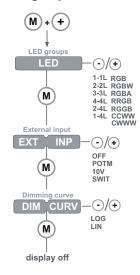

#### 3. Standalone operation - Colour\*-

(M)

M

(M)

(M)

display off

# or

⊙/⊕

0...1535

 $\bigcirc/(+)$ 

0...510

⊙/⊕

0...255

#### **Standalone** operation - Show -

(M)

(M)

(M)

M

display off


or

00 20

-99...99

0...255


#### Networked operation - DMX or DALI -

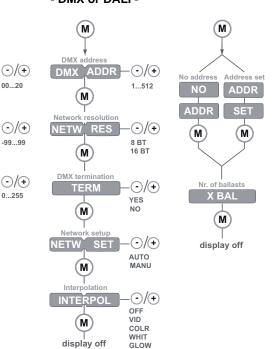

<sup>\*</sup> The colour menu depends on the LED group settings you have selected in step 2.

#### Other features

#### Locking the configuration

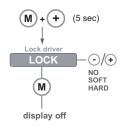

#### Visual test run



## Reset to factory defaults

